
 

 



BEL 100 SETTING INSTRUCTIONS

Setting Bel 100 for use in Bathrooms and Ensuites


i.e. Thermostat Outside Bathroom

1. Switch thermostat off with power button 
 2. Switch thermostat back on with clock symbol  by holding down for a few seconds
 3. Continue pressing clock button  until 09 appears in top left corner of screen
 4. With arrow down button press until 00 appears on centre of screen
 5. to store press power button 
- You have now set the thermostat to read floor temperature.

 
To Set Current Date and Time

1. Press clock button  twice.
2. The minutes section of the time display will flash
3. To set use the up and down arrows
4. Press H button and the hours display will flash
5. To set use up and down arrows
6. Press H button and day will flash
7. To set use up and down arrows
8. To Save your settings press F once

Setting Bel 100 Timer Function


 
 
 
1. Press Clock Button  Once to set your thermostat for MONDAY to FRIDAY
2. Set desired TIME using up and down arrow keys for first ON setting (1)
3. Press H and use up and down arrow keys to set TEMPERATURE for first ON setting in top left of screen (Recommended Floor Temperature 28⁰ C)
4. Press H and use up and down arrow keys to set Time for first OFF setting (2)
5. Press H and use up and down arrow keys to set TEMPERATURE for first OFF setting in top left of screen (Recommended Floor Temperature 19⁰ C)
6. Repeat steps 2 and 3 as above for Second On Setting (3)
7. Repeat steps 3 and 4 as above for Second OFF Setting (4)
8. Press H to set your thermostat for Weekend
9. Repeat steps 2 to 7 for Weekend settings
10. Press F to save all settings

Option for BOOSTING temperature


1. Press Arrow Up key and set to desired boost temperature
2. Press H to store – Heating  symbol and current temperature will appear and floor will heat to new SET temperature
3. Please NOTE – that at next time setting thermostat will revert to timer settings

Setting Bel 100 for use in Kitchens, Conservatories, Halls etc.


i.e. Thermostat Within Room

1. Switch thermostat off with power button 
 2. Switch thermostat back on with clock symbol  by holding down for a few seconds
 3. Continue pressing clock button  until 09 appears in top left corner of screen
 4. With arrow down button press until 01 appears on centre of screen
 5. to store press power button 
- You have now set the thermostat to read room temperature.


To Set Current Date and Time

1. Press clock button twice. 
2. The minutes section of the time display will flash
3. To set use the up and down arrows
4. Press H button and the hours display will flash
5. To set use up and down arrows
6. Press H button and day will flash
7. To set use up and down arrows
8. To Save your settings press F once

Setting Bel 100 Timer Function



1. Press Clock Button Once  to set your thermostat for MONDAY to FRIDAY
2. Set desired TIME using up and down arrow keys for first ON setting (1)
3. Press H and use up and down arrow keys to set TEMPERATURE for first ON setting in top left of screen (Recommended Floor Temperature 21⁰ C)
4. Press H and use up and down arrow keys to set Time for first OFF setting (2)
5. Press H and use up and down arrow keys to set TEMPERATURE for first OFF setting in top left of screen (Recommended Floor Temperature 12⁰ C)
6. Repeat steps 2 and 3 as above for Second On Setting (3)
7. Repeat steps 3 and 4 as above for Second OFF Setting (4)
8. Press H to set your thermostat for Weekend
9. Repeat steps 2 to 7 for Weekend settings
10. Press F to save all settings

Option for BOOSTING temperature

1. Press Arrow Up key and set to desired boost temperature
2. Press H to store – Heating  symbol and current temperature will appear and floor will heat to new SET temperature
3. Please NOTE – that at next time setting thermostat will revert to timer settings

**IMPORTANT NOTE – RECOMMENDED TEMPERATURES ABOVE ARE
INTENDED AS A GUIDE ONLY**

BEL 100 SETTING INSTRUCTIONS

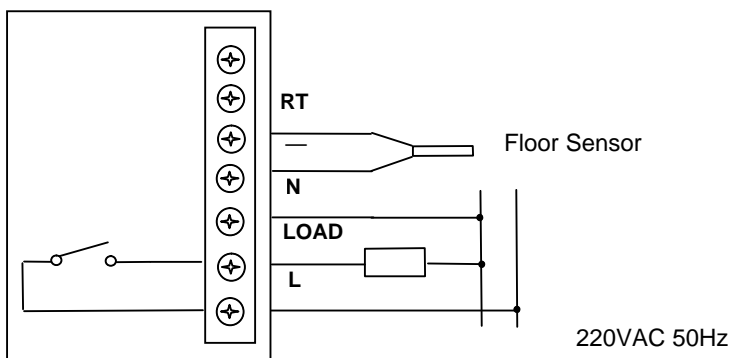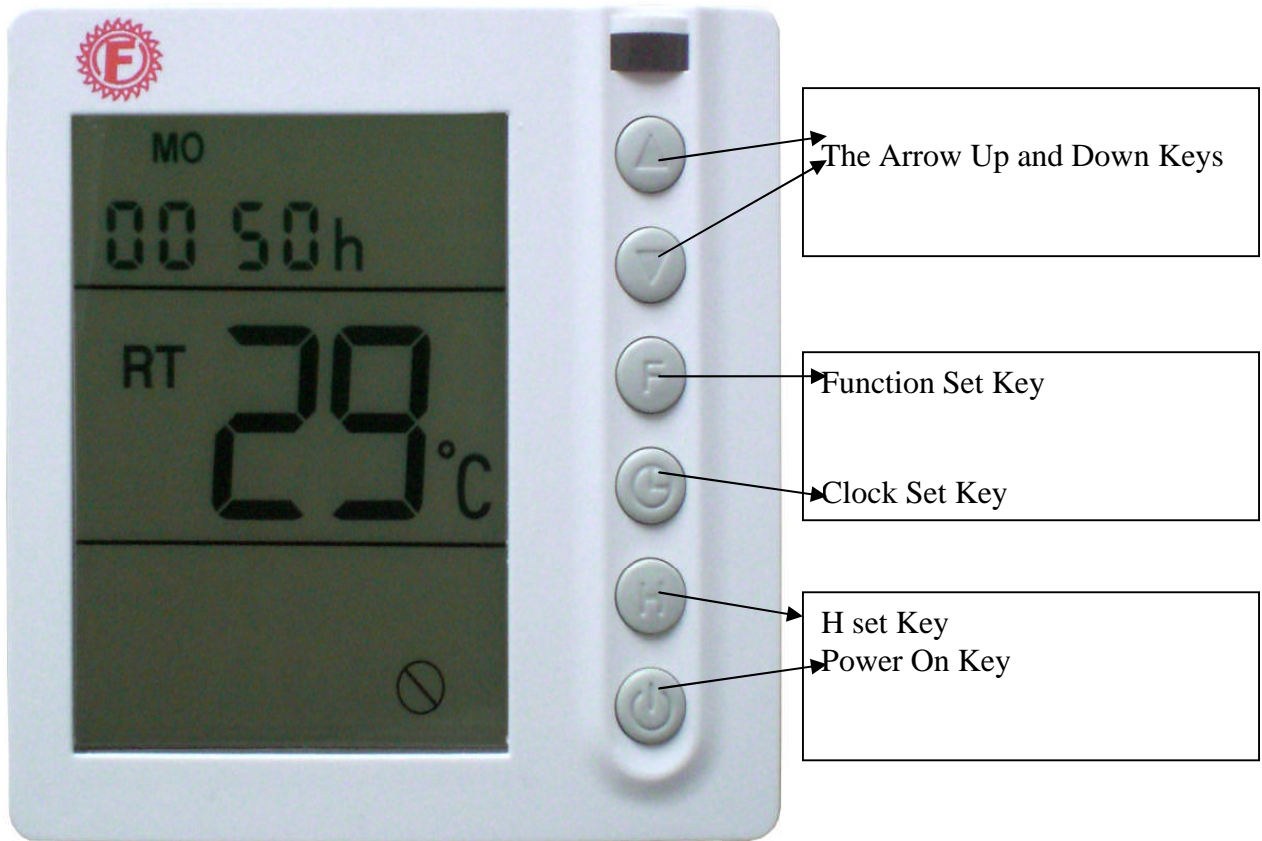

IMPORTANT NOTE – RECOMMENDED TEMPERATURES ABOVE ARE INTENDED AS A GUIDE ONLY